



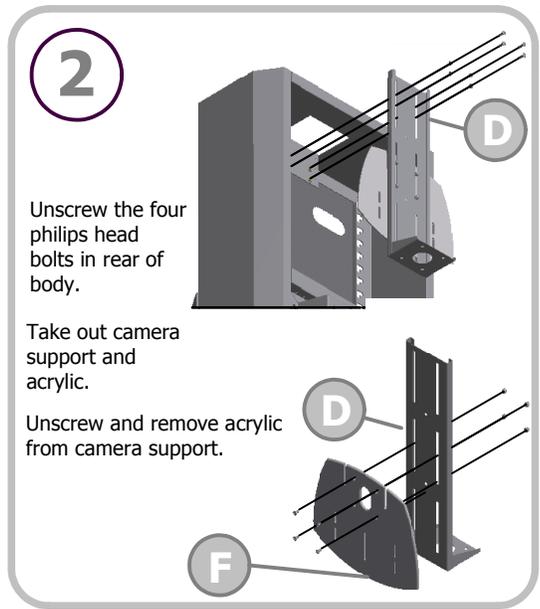


# RPS 1000

Easy Setup Guide

# Items included

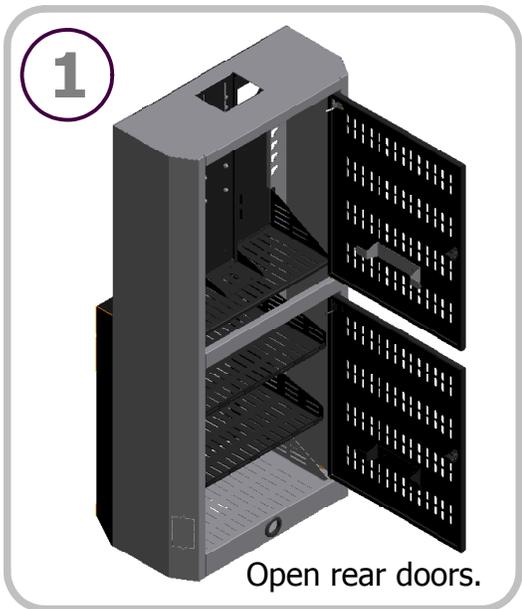


3

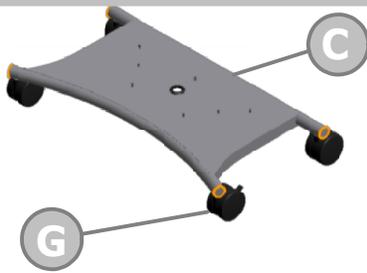


Attach casters (G) to base (C).  
Note: Casters with brakes should be assembled on front.

5

Secure body to base using flange nuts.

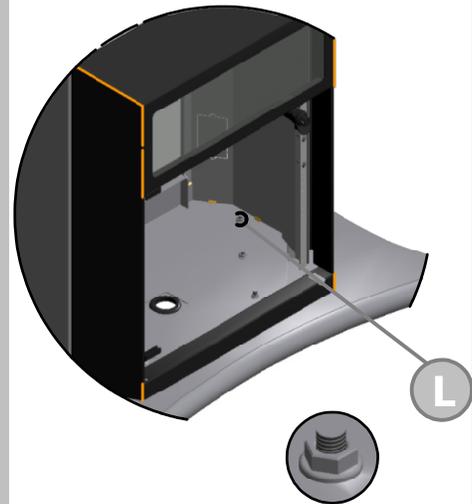


4

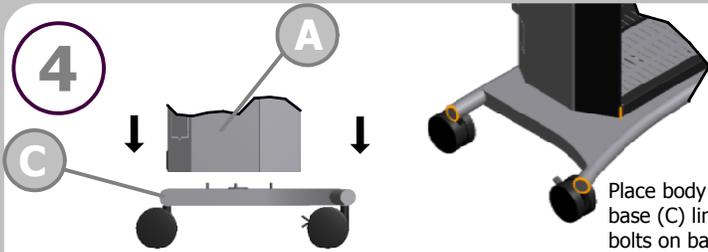

Place body (A) on base (C) lining up bolts on base with holes on body.


K

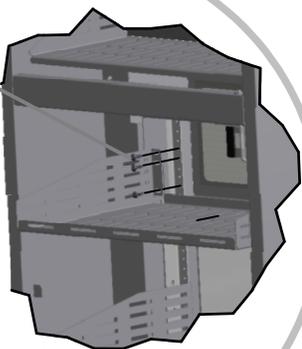

Shelf is adjustable.


6

Secure the support (E) to body (A) using the washers (N) and (O) as shown.

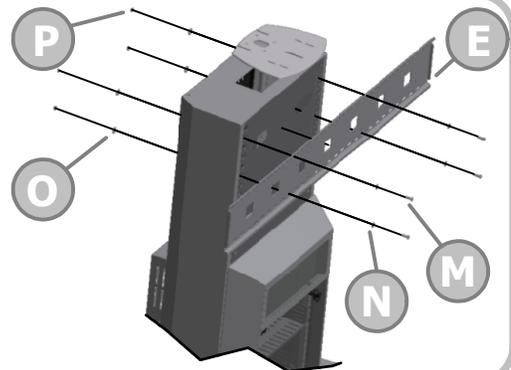


7




Using the screen mount bolts and washers, bolt the hanging bracket to rear of the flatscreen.

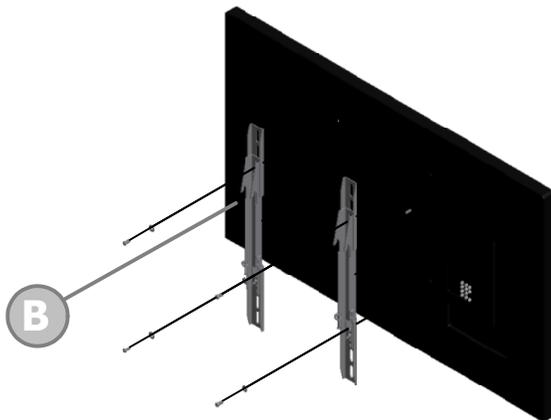

8


Hang flatscreen on support.

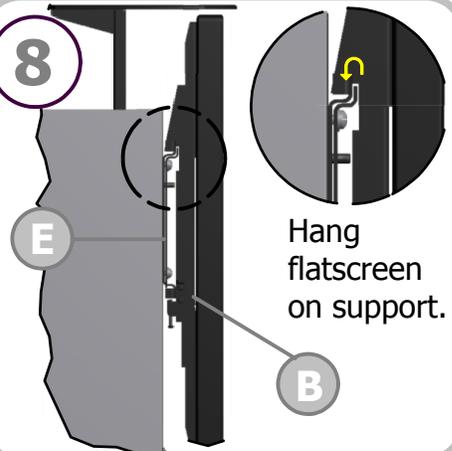

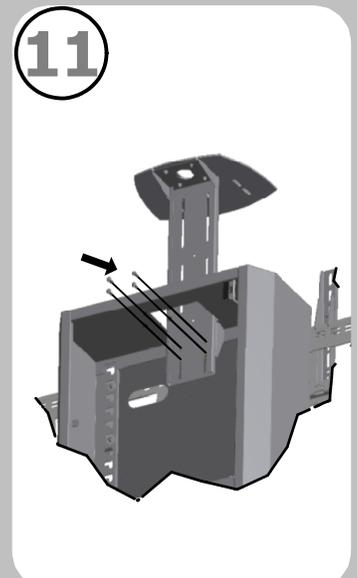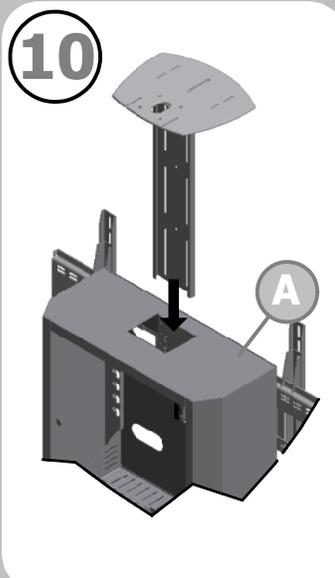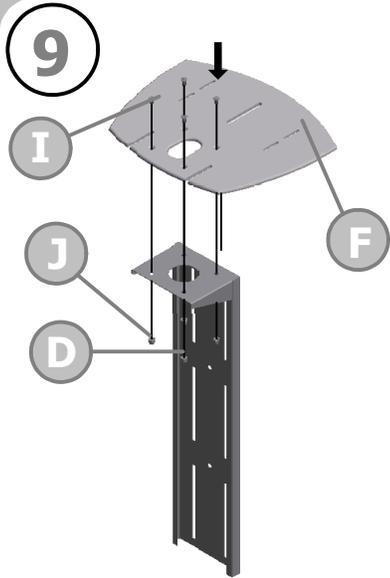


Attach acrylic (F) to camera bracket (D). Secure bracket (D) to body (A) at desired height using bolts.

12

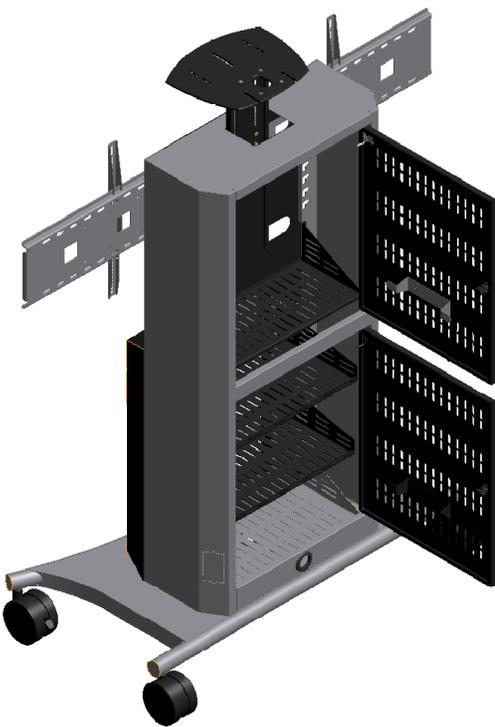


13

Assemble the handles (S) to the support (E) using the screws on the handle and 4 flange nut (R).

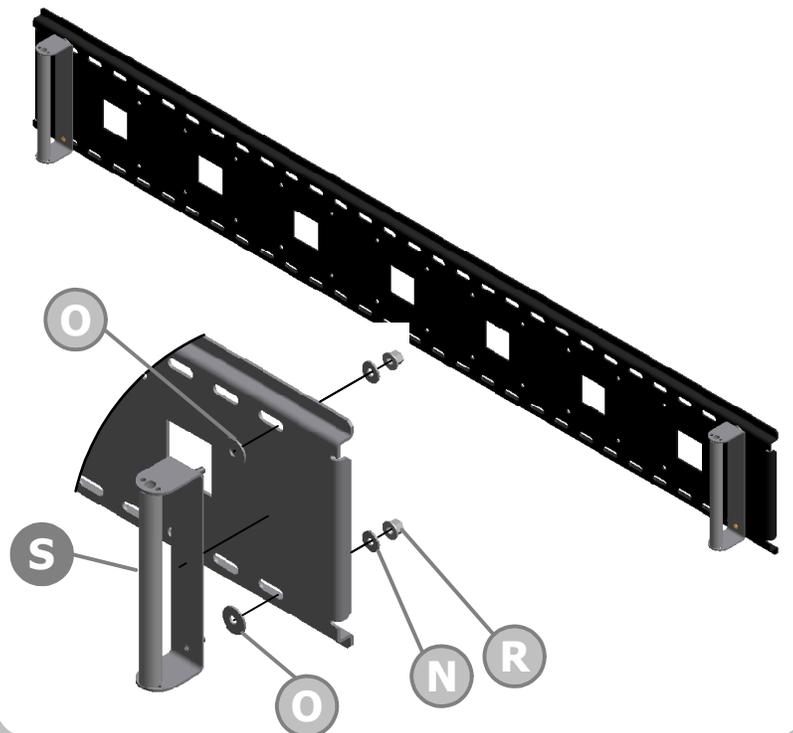

**R**

Nut (x3)

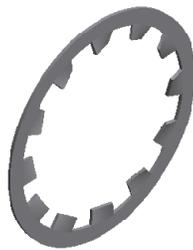**S**


Lock Washer (x3)

**T**


Pull (x3)

**U**


Cylinder (x3)

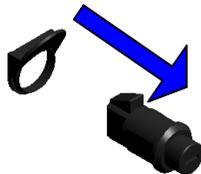**14**

Slide Pull (T) over Cylinder (U). The Flange must be as shown in the diagram

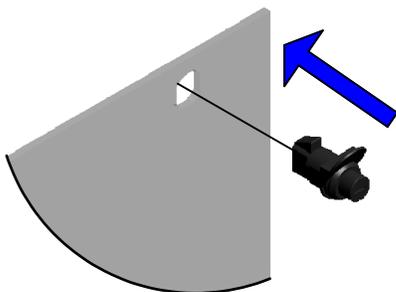

Slide Cylinder (U) through hole in glass as shown in diagram.

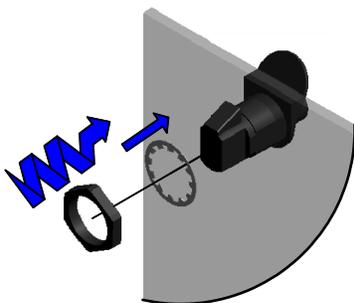

Slide and twist the Lock Washer and Nut (R), respectively, onto Cylinder (U) as shown in diagram. Ensure that it's placed in the correct position as shown in the diagram.