




Install Guide






Neat Frame Floor Stand

NEATFRAME-STAND

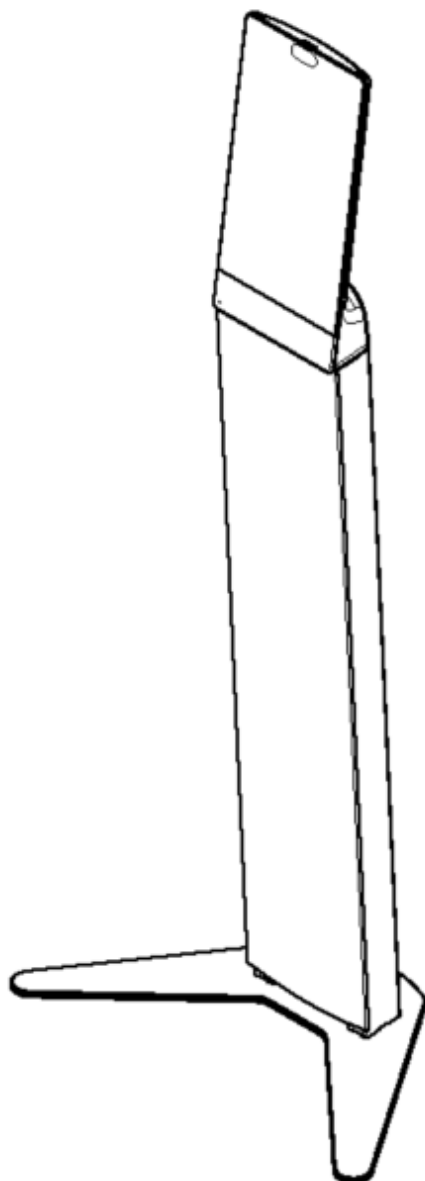

PACKAGE CONTENTS

Included with Neat Frame Floor Stand:

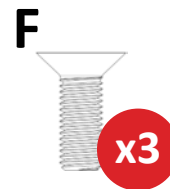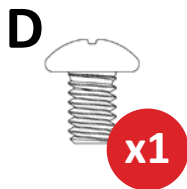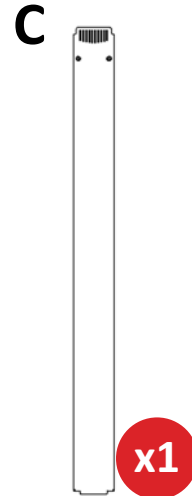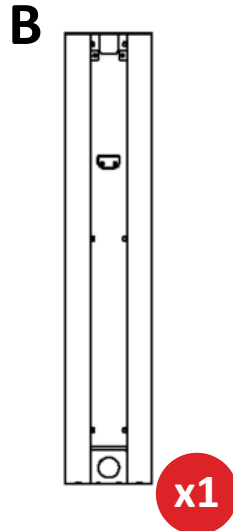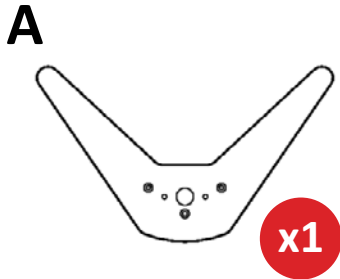

A. Base plate [x1]

D. 1/4-20 3/8" screw [x1]

B. Body column [x1]

E. Socket M6x1.0 10mm long screw [x2]


C. Rear cover [x1]

F. Flat 3/8-16 1.25" screw [x3]

STEP 1

Secure base to body column


- Place body column (B) on top of the base plate (A) and screw it on from the bottom of the base plate with [x3] flat headed 3/8-16 1.25" screws (F).

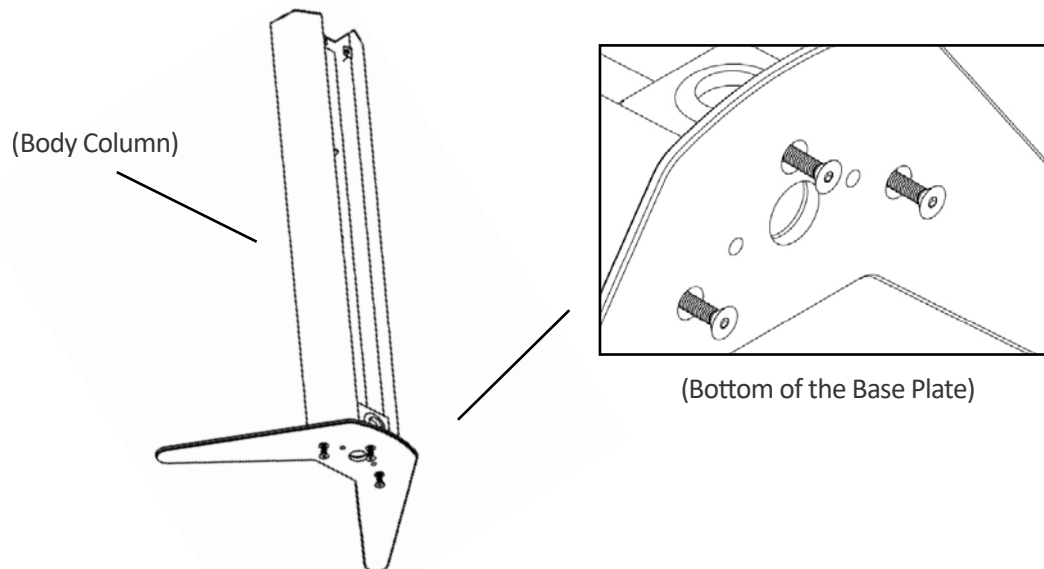

STEP 2

Secure the Neat Frame


- Place the Neat Frame on top of the body column (B).
- Secure the Neat Frame with [x1] 1/4-20 3/8" screw (D). Screw from the bottom into the top inner hole of the body column.

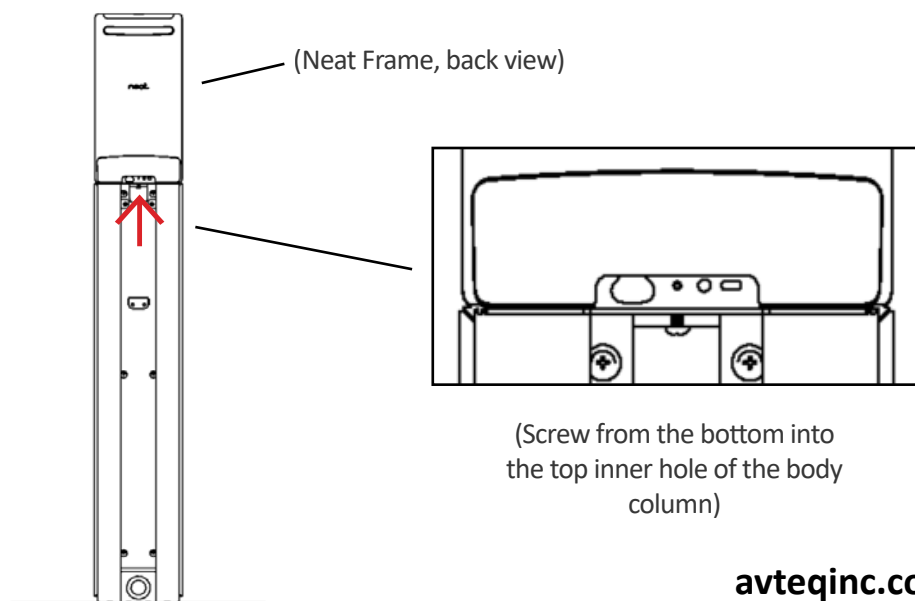

STEP 3


Secure rear cover to the body column

- Place the rear cover (C) behind the body column (B).
- Secure the rear cover using a wrench and [x2] socket M6x1.0 10mm screws (E) and screw into the two top holes of the rear cover.

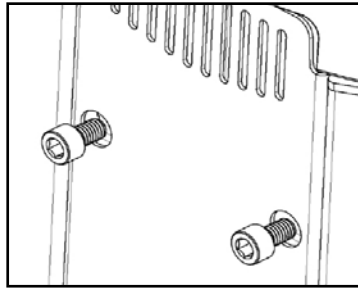

(Top holes of the rear cover)

(Screw from behind
the rear cover)

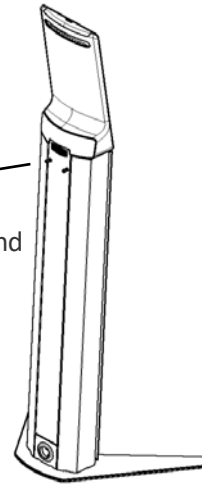

Have a question?

Contact us at support@avteqinc.com