AVTEQ

Easy Setup Guide

RPS 400

RPS-400 Instructions
1.800.285.8315

AVTEQ
www.avteq.net

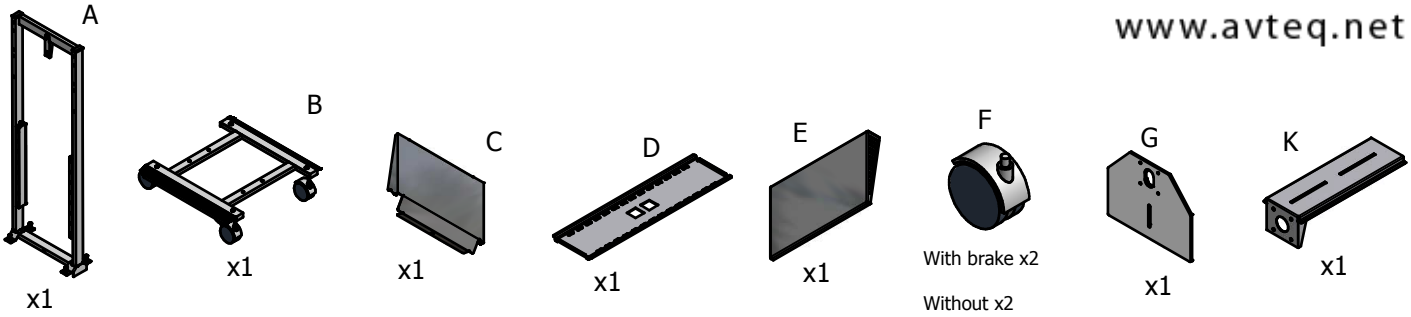

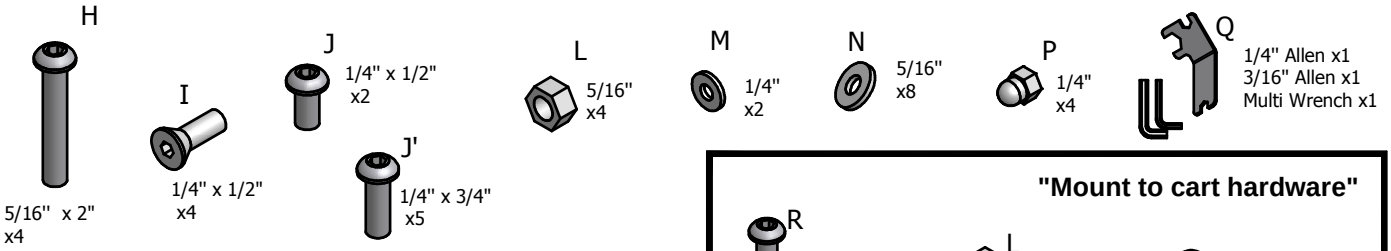

"Mount to cart hardware"

1

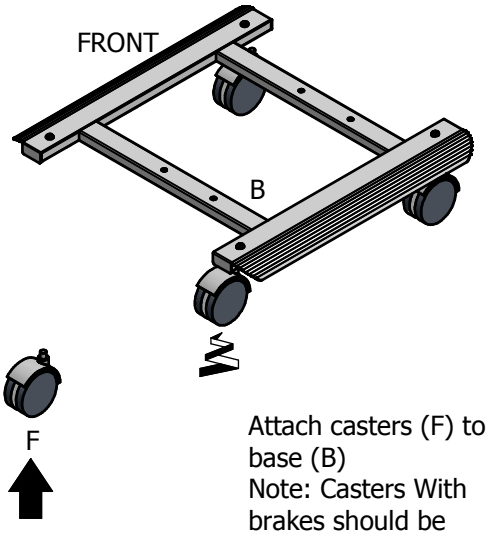

Attach casters (F) to base (B)
Note: Casters With brakes should be assembled on front.

2

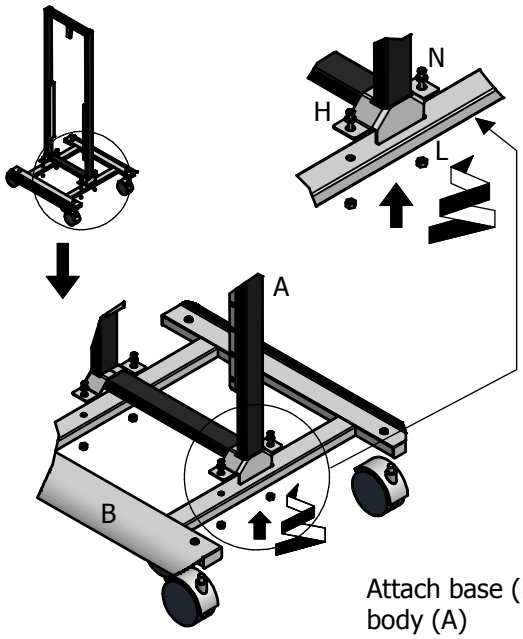

Attach base (B) to body (A)

3

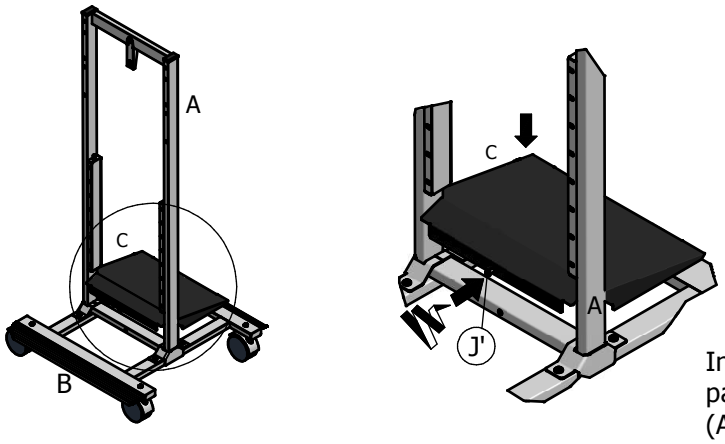

Insert and attach panel (C) to body (A).

AVTEQ
www.avteq.net

4

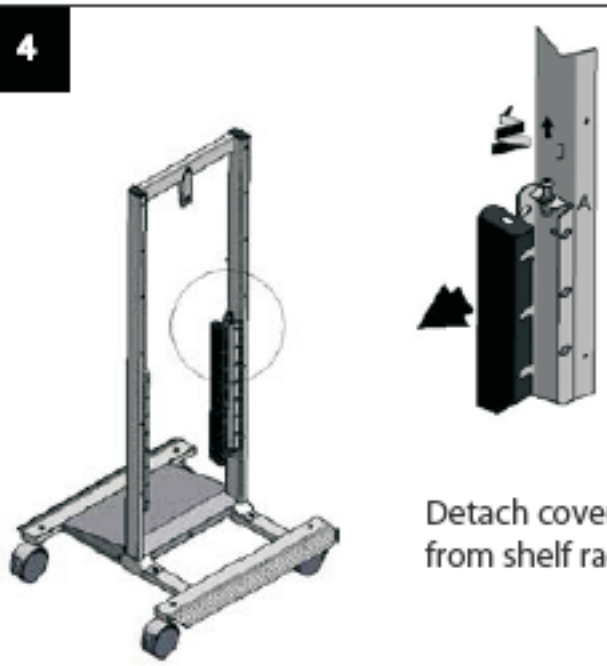

Detach covers from shelf rack.

5

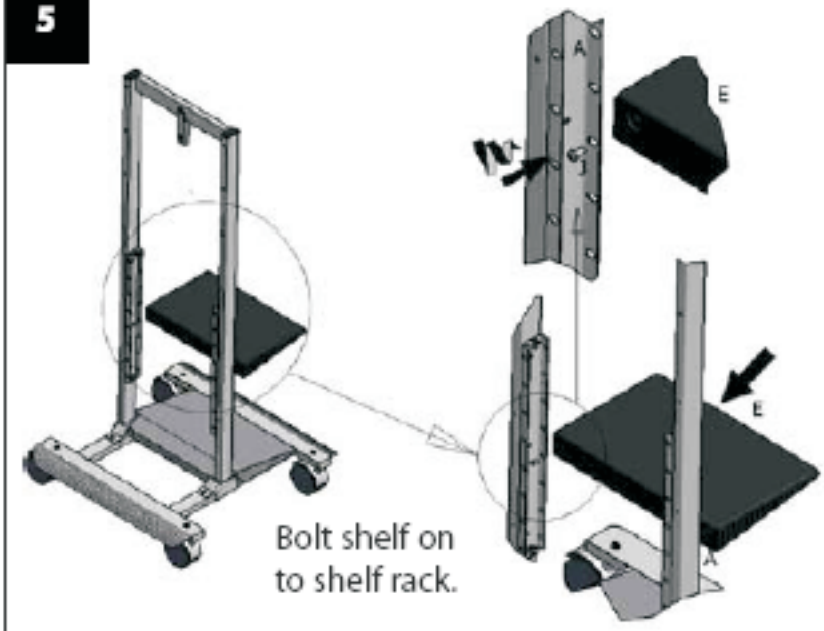

Bolt shelf on to shelf rack.

6

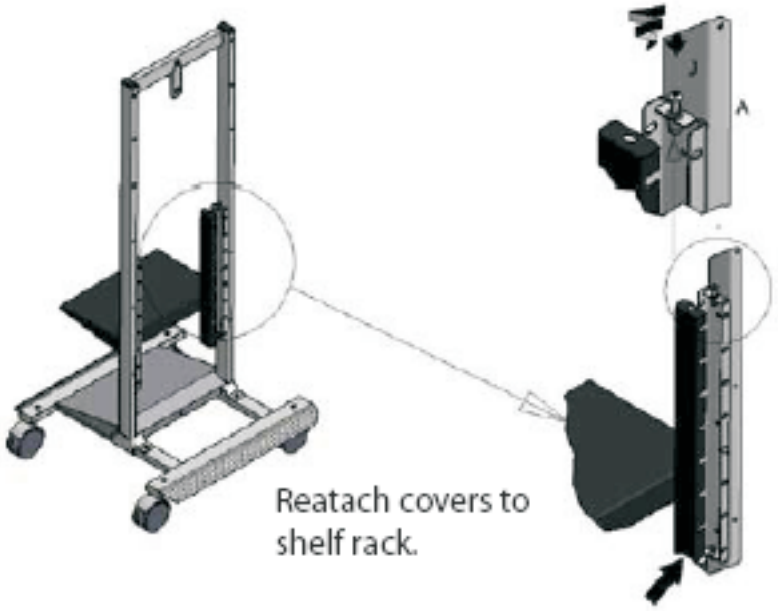

Reatach covers to shelf rack.

AVTEQ
www.avteq.net

7

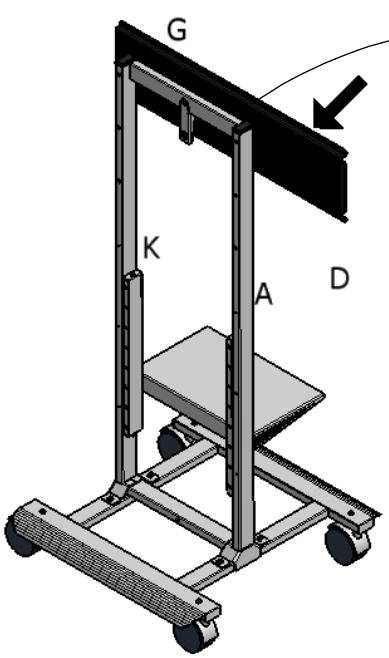

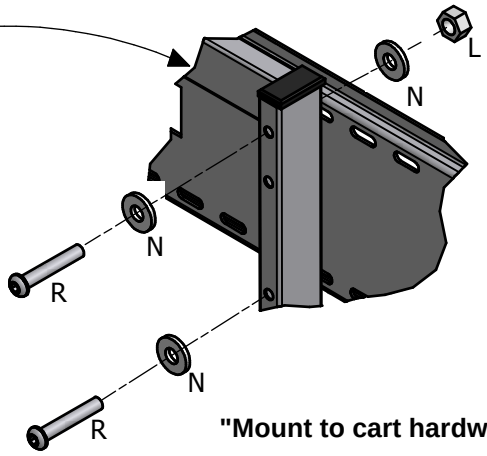

"Mount to cart hardware"

Attach screen support (D) to body (A)

NOTE: See instructions inside screen support box to mount flat screen on cart. Please secure the flat screen to the cart at desired height before moving on to step 8.

8
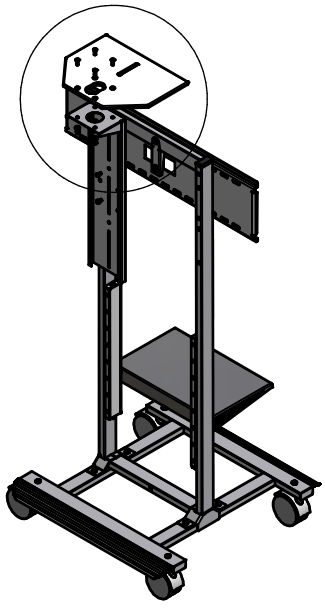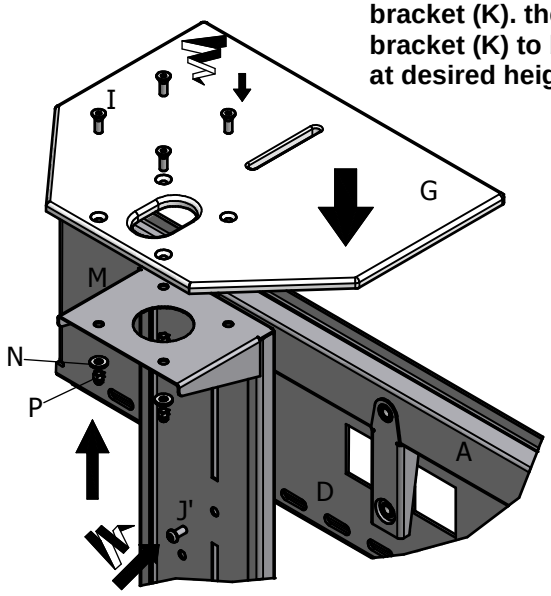
Attach acrylic (G) to bracket (K). then attach bracket (K) to body (A) at desired height.