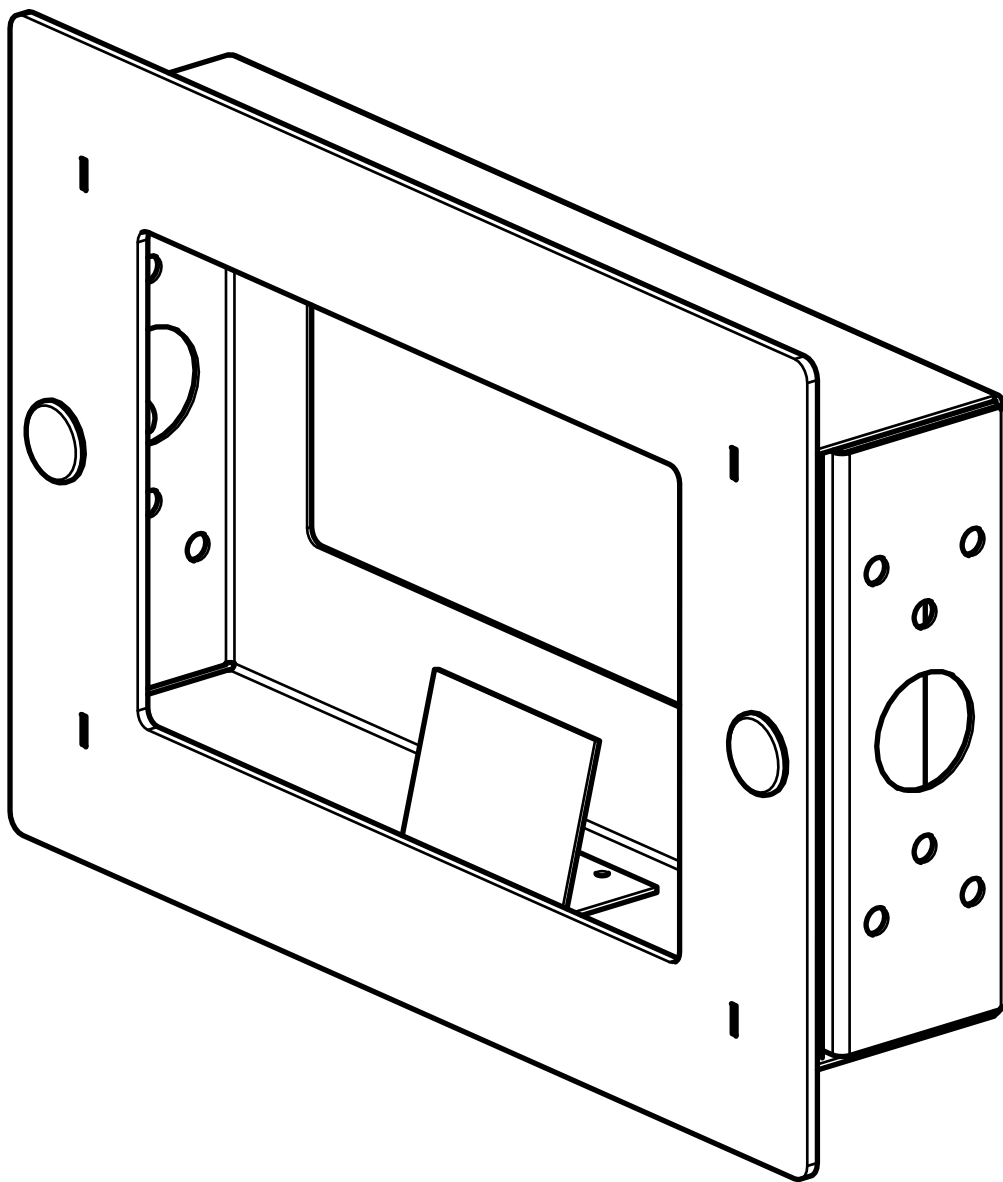# AVTEQ®

Install Guide

Neat Pad In-Wall Mount (NEATPAD-WMP)
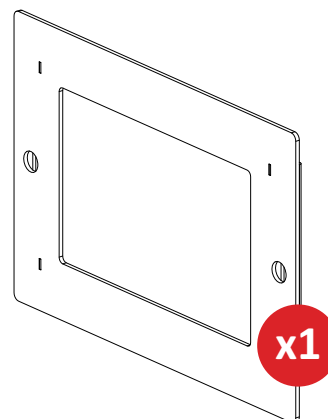
PACKAGE CONTENTS

Included with NEATPAD-WMP:

A

x1

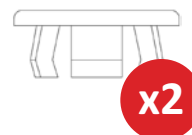**B**

x1

C

x4

D

x2

E

x2
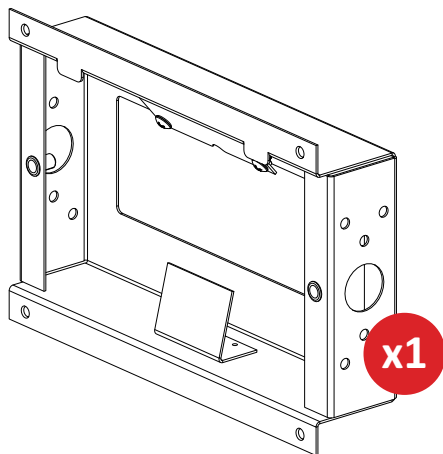
A.   Wall box [x1]

B.   Faceplate [x1]

C.   Anchor screws
      [x4]
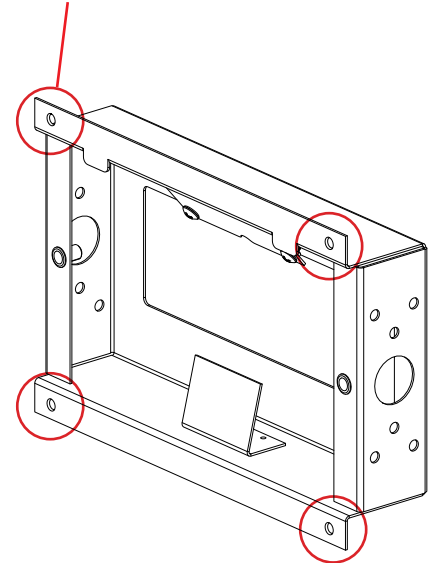
D.   M5 screws [x2]

E.   White stoppers

STEP 1

Secure Wall Box to Wall

NOTE: The cutout for the wall needs to be 9.8" wide and 5.5" tall.

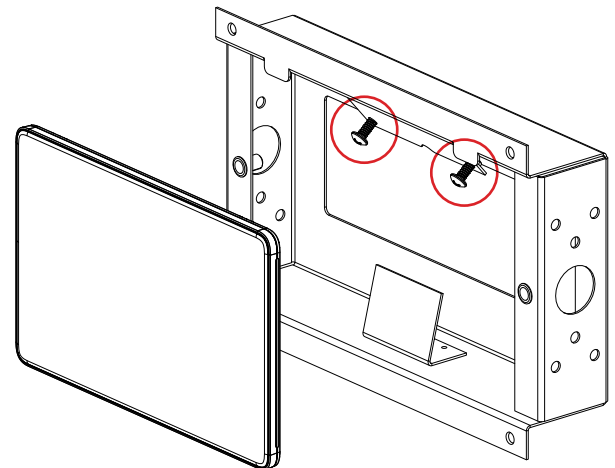- Place the wall box (A) in the wall. Secure the wall box to the wall with [x4] anchor screws (C).

STEP 2
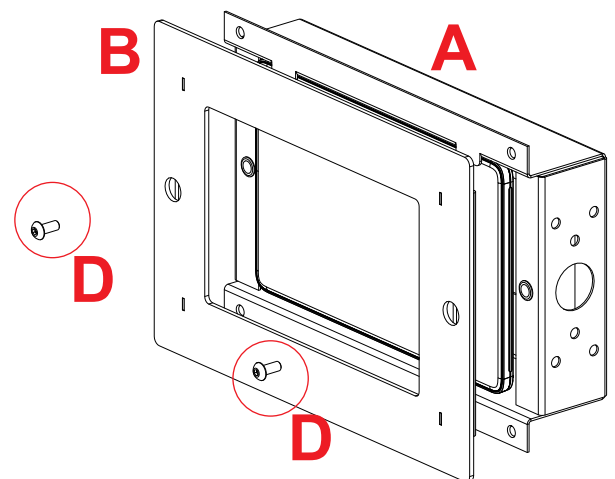
Adjust the NeatPad Angle

- Rest the **NeatPad** touch panel on the front side of the wall box.
- Adjust the angle of the Neat Pad by adjus ng the screws on the back.

STEP 3

Attach Faceplate to Wall Box

- Place the faceplate (B) over the touch panel and wall box (A).
- Line up the left and right holes and attach the faceplate using [x2] M5 screws (D).
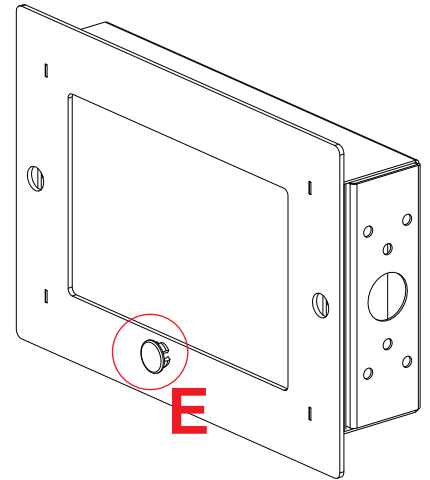
B   A

D

D

STEP 4

Secure Faceplate with Stoppers

- Insert [x2] white stoppers (E) onto the M5 screws (D).

E

E